

QUICK START GUIDE


Wireless gamepad for smartphones
MODECOM Volcano FLARE



Please read before use

Before you start to use this product please read carefully the following manual. Please use this product only according to its purpose. If the product will be used by children please train them to make sure that they use it properly.

1. Buttons and functions

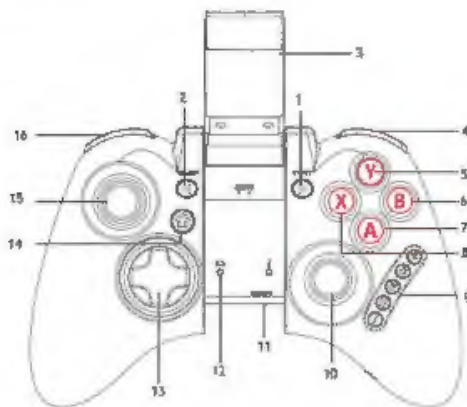

1.	Start button	To start a game (additional functions depending on each game)
2.	Select button	To start a game (additional functions depending on each game)
3.	Holder arm	To mount your smartphone
4.	RB/RT button	Functions depending on each game
5.	Y button	Functions depending on each game
6.	B button	Functions depending on each game
7.	A button	Functions depending on each game
8.	X button	Functions depending on each game
9.	Multimedia buttons	To control playing files and volume
10.	Right joystick	To control the in-game movement and mouse
11.	Power switch	To power on / off
12.	LED light	To signal BT connection
13.	Direction button	Functions depending on each game
14.	Home button	To turn on / Together with X button – pair
15.	Left joystick	To control the in-game movement
16.	LB/LT buttons	Functions depending on each game

2. Setting up

2.1 Charging

The built-in battery is an integral part of the device. Do not try to replace it or remove it. To charge the battery please connect the device to PC USB port or USB adapter via USB cable. Please note that the power adapter must be 5V (0.5A) 500mA. Full charging cycle should be completed in 180 minutes. When done, please remove the USB cable.

2.2 Turn on / off

2.2.1 Turn on

The product is meant for playing games which support external Bluetooth controllers. Please make sure the game you want to play supports gamepads. Please remember that you might need to select gamepad control in game settings and/or to assign specific buttons for specific game functions.

First time turn on – it will be required to pair the gamepad with smartphone. To turn on the product, first set the Power switch (11) to ON position. Then please press and hold X key and press HOME (14) at the same time to enter pairing mode.

Every other time turn on – It is not required to use pair mode. To turn on the product, first set the Power switch (11) to ON position. Then please press HOME (14).

2.2.2 Turn off

To turn off please press and hold HOME key for 5 sec. Then it's safe to set the Power switch to OFF position. The product will turn off automatically after 3 minutes if wireless connection is not established.

2.3 Connecting to Android device

First time turn on – it will be required to pair the gamepad with smartphone. To turn on the product, first set the Power switch (11) to ON position. Then please press and hold X key and press HOME (14) at the same time to enter pairing mode. In pairing mode the LED will blink quickly. Then turn on Bluetooth in your Android device Settings menu. Start scanning for Bluetooth devices nearby. Select the gamepad to pair. Connection will be established automatically. After pairing the LED will light continuously.

Every other time turn on – It is not required to use pair mode. Gamepad and smartphone will connect automatically when gamepad will be turned on and smartphone's Bluetooth module will be on. To turn on and connect, first set the Power switch (11) to ON position. Then please press HOME (14). Then turn on Bluetooth in your smartphone Settings. Then devices will connect automatically. After connecting the LED will light continuously. Please note that the gamepad must not be deleted from saved devices list in Bluetooth settings.

After pairing it's possible to turn on the Mouse mode. Press and hold Y button and HOME buttons at the same time to activate. You can move around the mouse cursor using the right joystick and use L1(LB) to confirm your selection and R1(RB) to return. To cancel Mouse mode please press and hold X key and press HOME (14) at the same time.

2.4 Connecting to Windows PC

To connect first power on and turn on the gamepad. Then turn on Bluetooth in your Windows PC Settings. Start scanning for Bluetooth devices nearby. Select the gamepad to pair. Connection will be established automatically.

3. Specifications

Bluetooth	3.0
Battery	3.7V 380 mAh
Supported systems	Android 4.4+, Windows 7+
Supported LCD sizes	from 4.5" to 6"
Phone width	min. 48mm, max. 88mm
Range	5-6m
Working time	~ 15h
Power	5V (0.5A) 500mA
Work. Temp.	0-50 °C
Store Temp.	-10-60 °C
Work. Humid.	0-80 %
Store Humid.	0-80 %

4. Troubleshooting

In case you are not able to pair the gamepad with your smartphone or tablet please make sure that:

- the built-in battery is charged
- Bluetooth function is activated in your smartphone / tablet
- the distance between devices is less than 5m

5. Important information

We advise against use of the product for extended periods of time to avoid such symptoms as painful wrists, fingers, arms. If you should experience any discomfort – stop using the product and make sure you're taking proper breaks. We advise to consult medical specialists. When using the product you need to take a comfortable position. Never use the device without any professional contact with objects or people nearby when must cause damage to the product and your health. Before you start, make sure you need to stop using the product.

ENVIRONMENT PROTECTION

The symbol on our product nameplates proves its compatibility with the EU Directive 2002/96 concerning proper disposal of waste electric and electronic equipment (WEEE). By using the appropriate disposal systems you prevent the potential negative consequences of wrong product disposal that can pose risks to the environment and human health. The symbol indicates that this product must not be disposed of with your other waste. You must hand it over to a designated collection point for the recycling of electrical and electronic equipment waste. The disposal of the product should follow all the specific Community waste management regulations. Contact your local city office, your waste disposal service or the place of purchase for more information on the collection. Weight of the device: 175g

MODECOM

Declaration of conformity EC Nr 54/03/2015

Referring to directive 1999/05/EE, 2011/65/EU

MODECOM S.A.

ul. Skrzyszowska 116A, Skrzyszów 35-360 (Poland), Poland

MODECOM S.A. declares under its own responsibility, that product MODECOM Volcano Flare Smartphone Gamepad to which this declaration relates is in conformity with the provisions of the following directives:

- RTTE 1999/05/EE
- RoHS 2011/65/EU

and complies with the harmonized standards listed below:

EN 505 344 V1.0.1 (2013-05)
EN 505 469-1 V1.0.2 (2013-05)
EN 505 469-2 V1.0.1 (2013-05)
EN 505 469-3 V1.0.1 (2013-05)
EN 505 469-4 V1.0.1 (2013-05)

The last two digits of the year in which the

Wrocław, 25.04.2015

signature / date of approval

Andrzej Kozłowski

Andrzej Kozłowski
Chief Executive Officer
Product Manager
(Signature)

www.modecom.eu

Copyright © 2015, MODECOM S.A. All rights reserved.
MODECOM Logo is a registered trademark of MODECOM S.A.